

PRODUCT INTRODUCTION:

FITZ aroma diffuser suits for small commercial area . With advanced atomization technology, it turns the liquid essential oil into fragrance. Along with the airflow, the fragrance will fill in all the area. The setting of concentration and timer can be adjusted with different requests. PCB program can be locked after operation to make it safer.



 
FITZ Technical parameters:

Capacity:150/ 200ml	Coverage: 300CBM
Volt : DC12V	Decibel: <38dba
Power: 5W	Weight: 0.85KG


- Spare part: aroma diffuser, power adapter, specification, atomizing core, screw.
- The setting of concentration and timer can be adjusted according personal.
- Put oil inside the machine ,you can feel your space full of good smell all the time.



Aroma diffuser

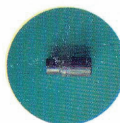

Atomizing core

 

Screws



Wall hanger (optional)

 


Adapter

STEP:



First :
Press the top button
Open the cover

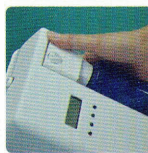

Second:
Please take out the nozzle
and unscrew the bottle



 
Third :
Put essential oil into the bottle,then
fix the spray nozzle with bottle again



Fourth:
Match the air outlet
and put it back

SET THE SYSTEM TIME:

Firstly to press **[SET]** , the LCD display showed "hours" figure will flash , then press **[UP/DOWN]** to adjust hour.Press **[SET]** at second time. Hour adjustment finished. The minutes figure will flash, then press **[UP/DOWN]** to adjust the minutes.Press **[SET]** at the third time, Minutes adjustment finished.The indicated date will flash,press **[UP/DOWN]** to adjust the current date , finally press **[SET]** at fourth time, all function setting finished.

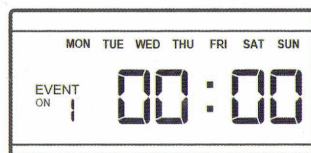

MODE SET UP DOWN



SET UP THE WORK TIME:



Adjust different function,including your local current time,5 different groups working periods,Work/Pause interval time,aroma concentration.Press **[MODE]** for 10 seconds to restore the factory settings.



Start program Setting by flexible setting including the Time,Date,aroma concentration.Then,press **[SET]** for 10 seconds to lock / unlock the previous setting.



Press it to adjust/increase the function,such as adjust the time,aroma concentration,working days.



Press it to adjust/decrease the function,such as adjust the time,aroma concentration,working days.

SET THE WORKING PERIODS:

○ The machine can be set for 5 groups different working periods , it can also set different working days from Monday to Sunday according to different request.(Such as working for Monday ,Wednesday,Friday; Stop for Tuesday,Thursday,Saturday)

○ First time to press **[MODE]** , the LCD display will show **[EVENT 1 ON]** means it is the START TIME of first group. Then, press **[SET]** to do the program setting, Press **[UP/DOWN]** to adjust the hours,minutes and needed working days group.

○ Second time to press **[MODE]** ,the LCD display will show **[EVENT 1 OFF]** means the PAUSE TIME of first group.Then, press **[SET]** to do the program setting. Press **[UP/DOWN]** to adjust hours,minutes.

○ Third time to press **[MODE]** , the LCD display will show **[SCENT WORK PAUSE]** means the AROMA CONCENTRATION SETTING of first group . Press **[UP/DOWN]** to adjust the aroma concentration. Every time you can adjust 5% (such as 5%,10%,15%....), the maximum is 95%, the minimum is 5%.

Notice:

- 1.For example 5% means it work for 10 seconds and stop for 190 seconds. 95% means it work for 190 seconds and stop for 10 seconds.Means based on a period of 200 seconds totally for ON/OFF.
- 2.Long press MODE button back to Factory Settings (60%)
- 3.Press SET for 10s to lock/open the PCB system settings

TIP:

If don't use the equipment for a long time, please clean the spray nozzle and internal parts.

operation: add 95% alcohol to the empty oil bottle,set the machine to be 95% to work for 10-15 minutes .

To clean the machine with 95% alcohol every two months.

TROUBLESHOOTING & MAINTENANCE

TROUBLES	ELIMINATION METHODS	MAINTENANCE
NO LCD indication	Check the power supply and the switch	Connect the power supply again and turn it ON
NO atomization	Check the power supply ; check the pump working or not; check the working status (working time or pause time)	Connect the power supply again to check the pump and set the program again
Small atomization amount	Check the atomizer if block or not; check the pump good or not	Clean the atomizer and change the pump
Comes out liquid oil from external atomization connector	Check if the atomization connector is loose or not Check if the machine is lean or not	Tighten the atomization connector and make the machine upright
Oil Leaking	Check if the oil bottle is loose or not; Check if the bottle seal is lost or not	Tighten the oil bottle and bottle seal

OPERATION FOR ADDING AND CHANGING THE OIL

For the first time to use the machine, please tighten the oil bottle before connecting power supply, Set the working time and adjust the aroma concentration.

If need to add or change the oil, please cut down the power supply .Then open the machine with the key ,rotate the empty oil anticlockwise to take out the bottle to put the oil in again and finally clockwise rotate the bottle and make sure it is tight. Then connect the power supply again.

WARRANTY

It is suitable for all the machines.


Within 12 months after purchase date, Warranty is offered for all qualified machines. During warranty, we will offer repair services and the free parts.

The warranty card & purchase Invoice are needed if after service required. Please do contact with us within warranty if any problems.

THE FOLLOWING IS NOT FOR FREE WARRANTY SERVICE

- Damage & problems caused by Accidents & Fire.
- Not use properly and wrong operation.
- If repaired by not professional person and make some parts damaged.
- Damaged during transportation.
- Without our warranty card,
- Without proper cleaning for a long time.
- Machines & Parts not from us.
- Machines not gotten from official channels.
- Send the machines back without permit from manufacturer.

EQUIPMENT COMPONENT INSTRUCTION

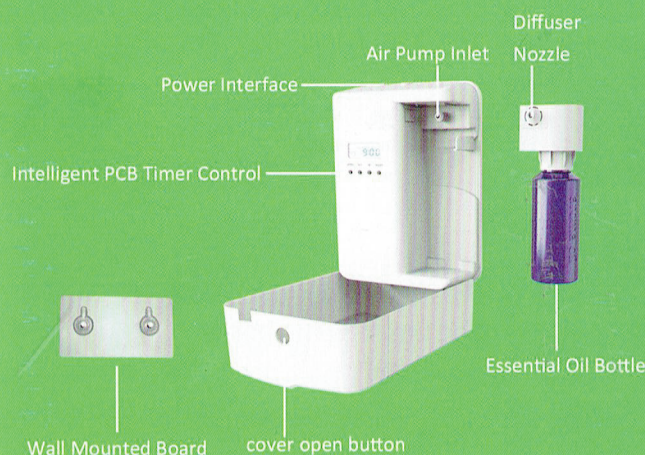

Wall mounted installation :

Fix the board on the wall with screws.

Lock the machine on the board.

METHOD OF CHANGING ATOMIZING CORE



Step 1: Screw out the essential oil bottle, then pull out the pipe and take the atomizing core out.



Step 2: Put the new atomizing core inside the nozzle

Dear Users:

1. Please read carefully before use and keep properly;
2. Please make sure the machine without any essential oil inside the bottle during transportation, so that to protect the machine from getting damaged and leaking;
3. Please make sure the machine upright ,no leaking and no down; or may damage the device and parts;
4. Please do not use the broken power wire and make sure the power supply is suitable for the machine, or may cause fire ;
5. Please do not open the machine by yourself, If any problems, please contact us promptly!

SCENT EQUIPMENT USER MANUAL



EXPERT IN FRAGRANCE DELIVERY SYSTEM SOLUTION

SAFETY EFFECTIVE ENVIRONMENTAL